



## How to remove the anti double feed system

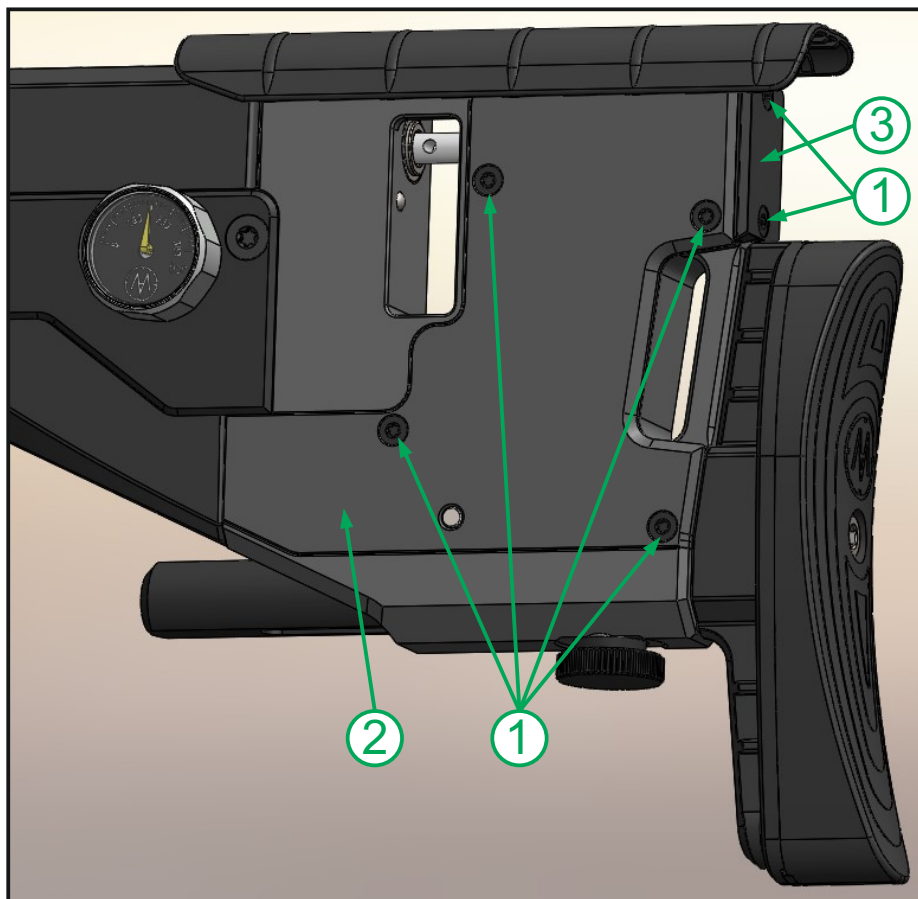


- Unscrew the screws (1).
- Remove the receiver cover (2) and the receiver back cover (3).

## How to remove the anti double feed system

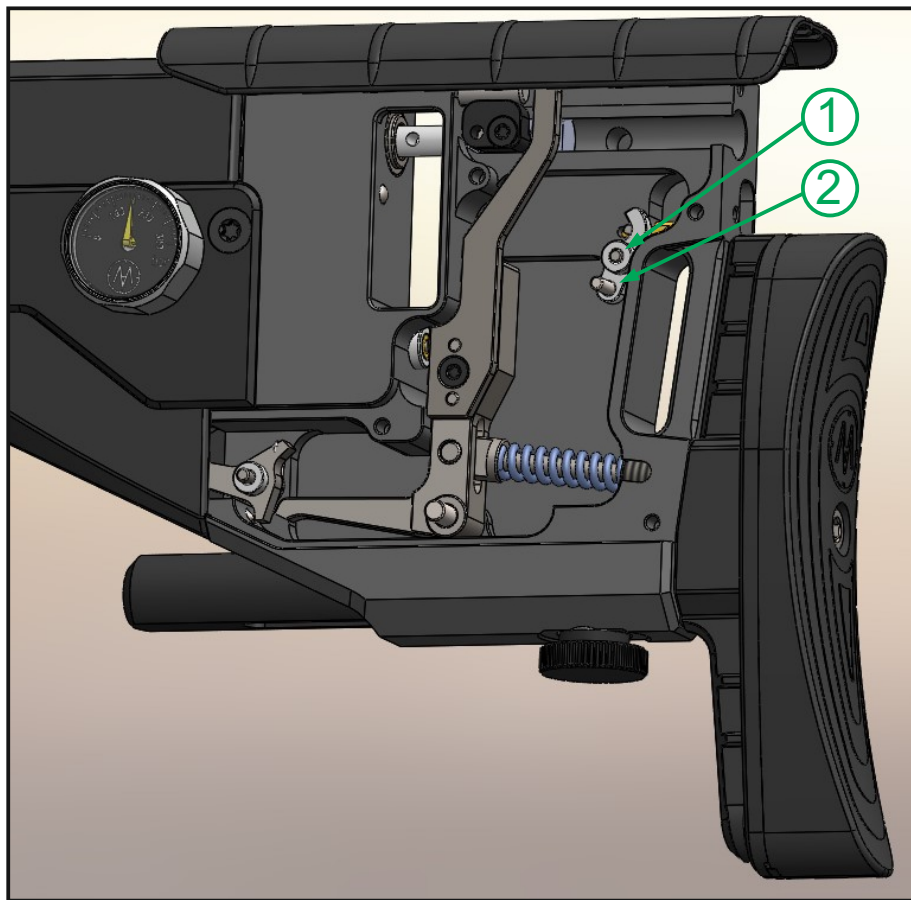

- Remove the white washer (1).
- Remove the rocker (2).

## How to remove the anti double feed system

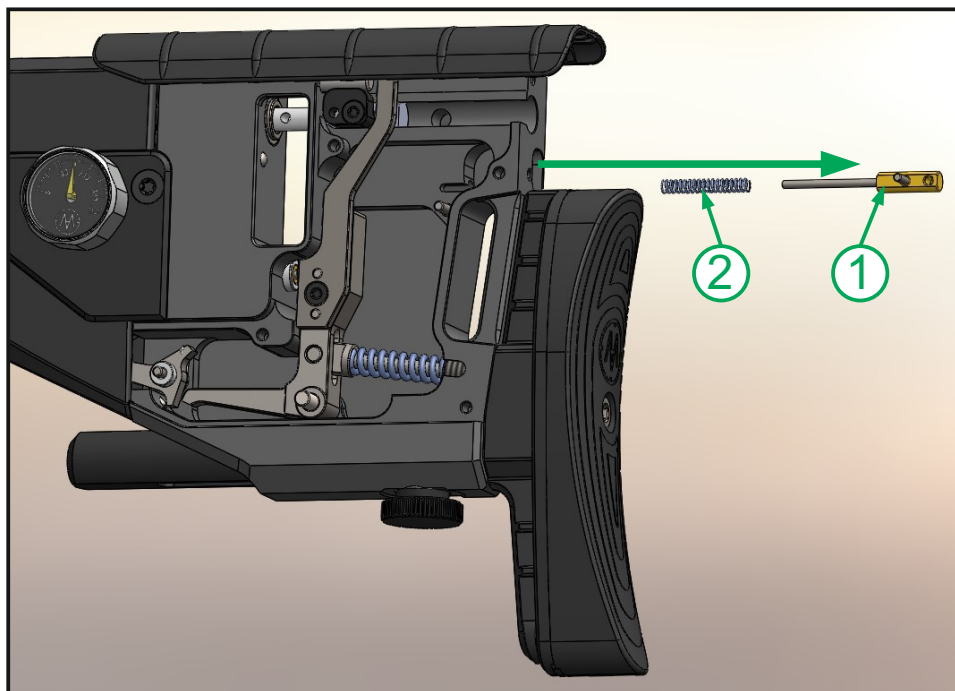

- Remove the anti double feed latch (1) and the spring (2).
- Mount the receiver cover and the receiver back cover back.
- Screw the screws back.