



TRIGGER ADJUSTMENT

1. Release the magazine.

Before doing follow operations please make few dry shots.

2. Unscrew the screw (A) and take off the cover (B).

3. Loosen the screw (C).

4. To decrease second stage travel, turn screw (D) in (clockwise).

or

4a. To increase second stage travel, turn screw (D) out (counter clockwise).

5. Cock the rifle and try to use this adjustment.

6. For preferable adjustment of the second stage travel do steps 4-5 again.

7. Tighten the screw (C).

8. Loosen the screw (E).

9. Move part (F) forward or backward to increase or decrease the first stage effort.

10. Tighten the screw (E).

11. Mount the cover (B) back and screw the screw (A).

POWER ADJUSTMENT

1. Loosen the screw (G).

2. To increase a power turn screw (H) in (clockwise).

3. To decrease a power turn screw (H) out (clockwise).

4. Tighten the screw (G).