



# TRIGGER ADJUSTMENT


# KRAIT LITE

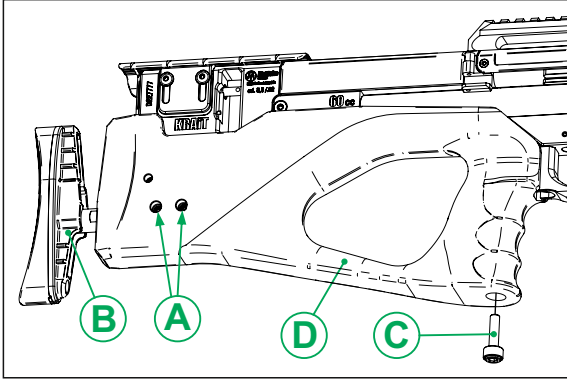

1. Loosen the screws (A).
2. Remove the butt-pad (B).
3. Unscrew the screw (C).
4. Remove the stock (D).

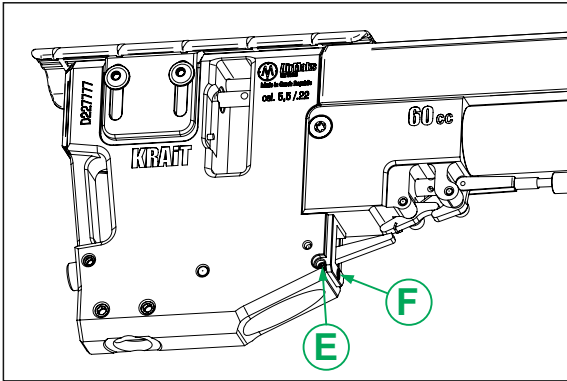

1. Loosen the screw (E).
2. Screw in the screw (F) to decrease the second stage length. Unscrew the screw (F) to increase the second stage length.
3. Tighten the screw (E).

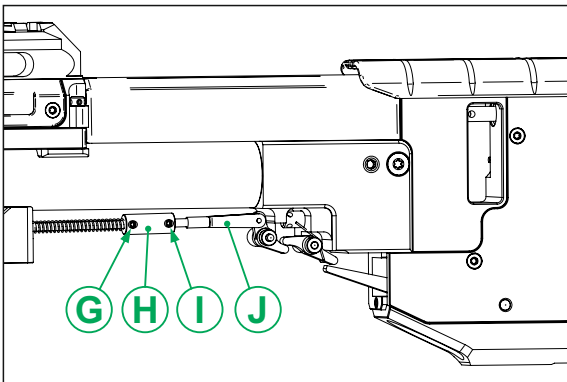

1. Loosen the screw (G).
2. Move the part (H) left or right to increase/decrease the first stage tension.
3. Tighten the screw (G).
4. Loosen the screw (I).
5. Move the fork (J) left or right to increase/decrease the first stage length.
6. Tighten the screw (I).